


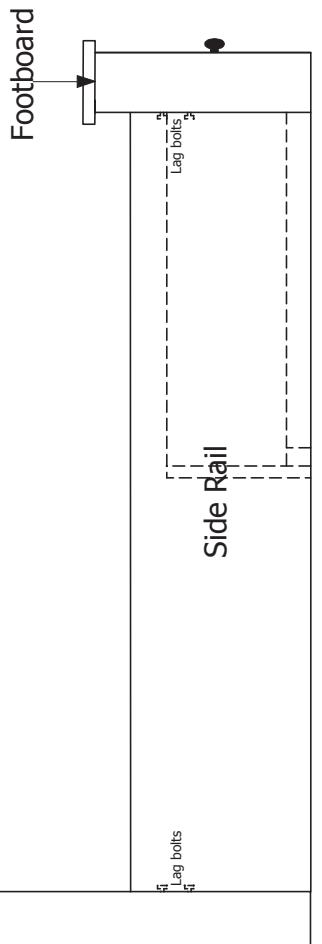

## Step-1

Simply slip the side rail onto the lag bolts in the footboard drawer banks and then do the same on the headboard. Using a 1/2" box end wrench or socket and ratchet (not included), tighten the lag bolts until the head/footboard feels sturdy. Take care not to overtighten bolts to prevent stripping the threads on the bolts.


### Bed Assembly Instructions Frame bed with footboard drawers.



## Step-2

The 2 center supports that are included may be screwed into 2 of the 4 slats.

Headboard

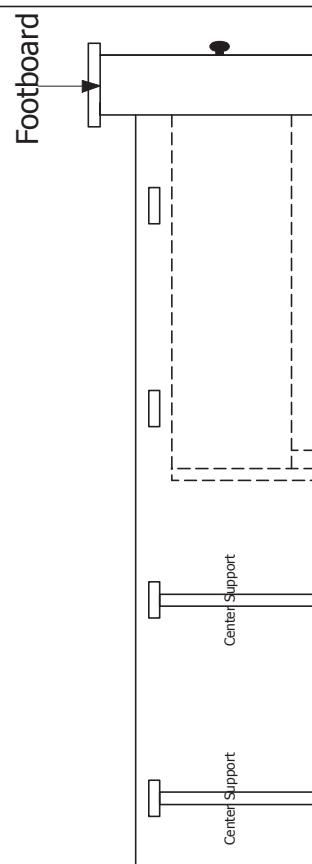

## Step-3

Lay the slats into the slat brackets, with the 2 that have center supports being closest to headboard. Using the feet on the bottom of the center support legs, adjust the center slats so that they are completely level from side to side.

Headboard

