


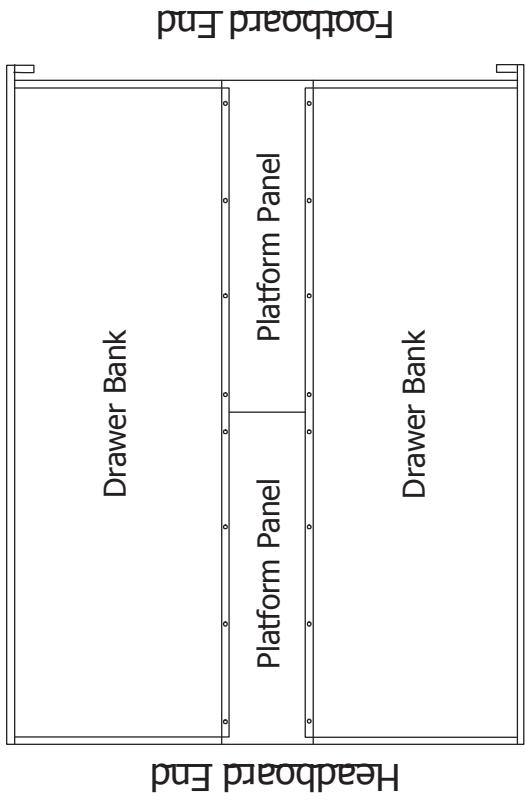

Step-1

Allowing room for the headboard (if included), position the 2 drawer banks back-to-back where the bed will be located. Use the included platform panels to determine the spacing. Set the panels in place and install the 16 provided short screws into pre-drilled holes, using a square drive drill bit. NOTE: Twin size bed platform will be 1 piece.




Bed Assembly Instructions

Pedestal Bed w/1-60" or 2-30"
drawers on each side

Step-2

Footboard Panel →

Slide footboard panel into slots on the ends of the drawer banks.

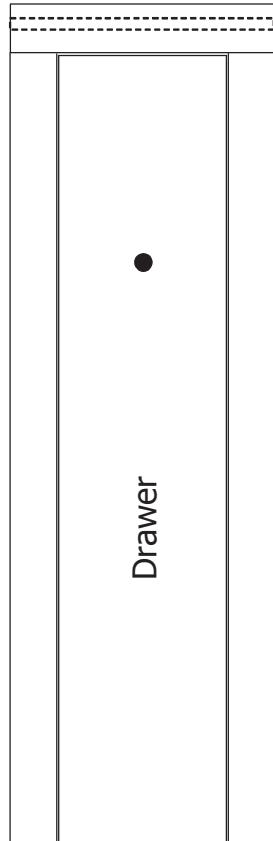

Step-3

Position headboard or bookcase headboard against assembled drawer banks and check spacing on both sides to ensure it is properly centered. Holding headboard firmly against each drawer bank, drive 3 provided long screws through the pre-drilled holes in the platform and into the headboard post on both sides as shown, using a square drive drill bit. Note that the top screw location, position A on the drawing, is located just below the rim at the top of the platform. The other two screws, in positions B and C, are accessed through the small door. NOTE: Headboard posts and bookcase headboards are not pre-drilled.

→ Headboard or Bookcase Headboard

