




Step-1

Simply slip the side rail onto the lag bolts in the footboard drawer banks and then do the same on the headboard. Using a 1/2" box end wrench or socket and ratchet (not included), tighten the lag bolts until the head/footboard feels sturdy. Take care not to overtighten bolts to prevent stripping the threads on the bolts.

Headboard

Bed Assembly Instructions

Supreme Pedestal Bed

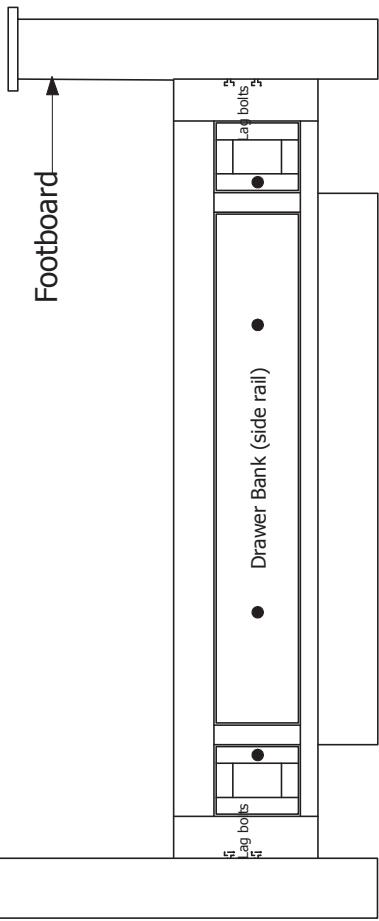

Step-2

Set the platform panels in place and install the 16 provided short screws into pre-drilled holes using a square drive drill bit.
NOTE: Twin size bed platform is one piece.

