




Instrucciones de ensamblaje de la cama de armadura con rieles y tablillas


Paso-1

Simplemente deslice el riel ancho lateral a los tornillos de cabeza cuadrada en el panel de pie de cama, y luego haga lo mismo en la cabecera. Usando una llave de $\frac{1}{2}$ " pulgada, o llave de vaso (no incluidos), apriete los tornillos de cabeza cuadrada hasta que la cabecera y el panel de pie de cama se sientan ajustados. Tenga cuidado de no apretar demasiado para evitar una falla de rosca

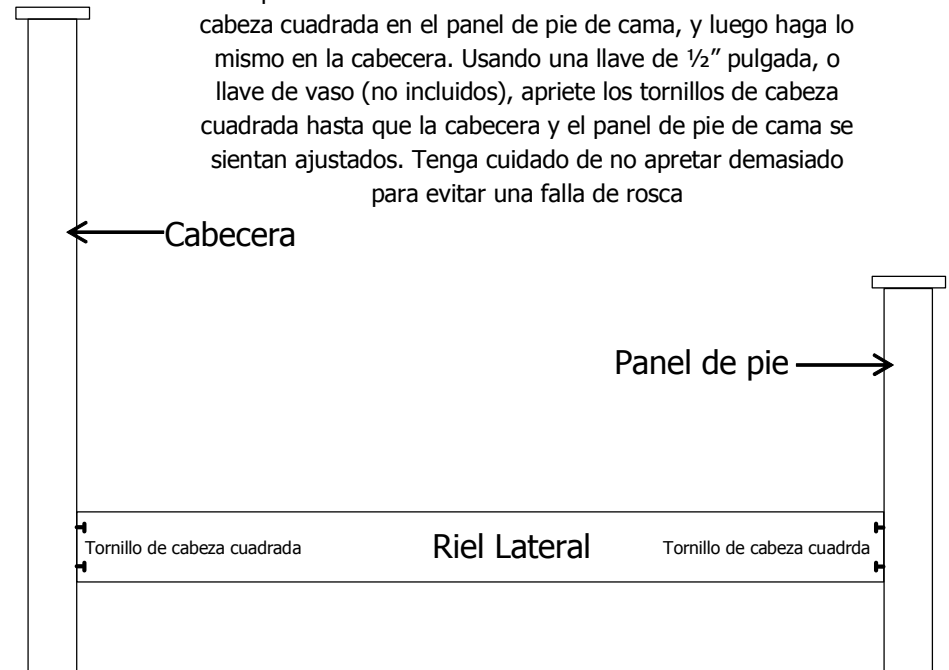


Paso-2

Favor atornille los soportes centrales (solamente camas tamaño Rey o Reina) a cada reja.

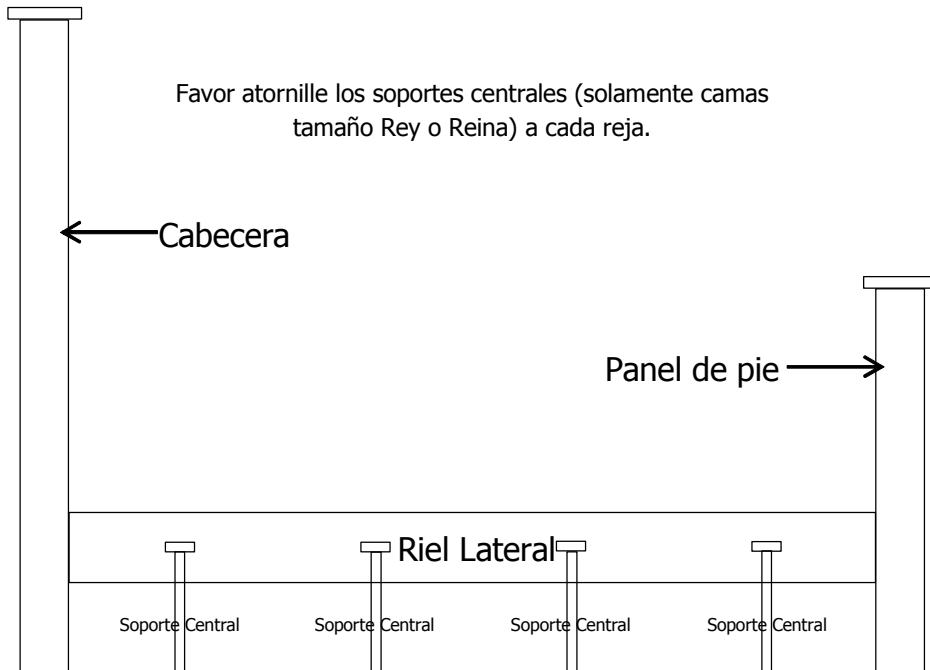

Paso-3

Ponga las tablillas en los soportes de tablilla. Usando las patas localizadas al fondo del soporte central, ajuste las tablillas centrales para que estén completamente nivelados de lado a lado.

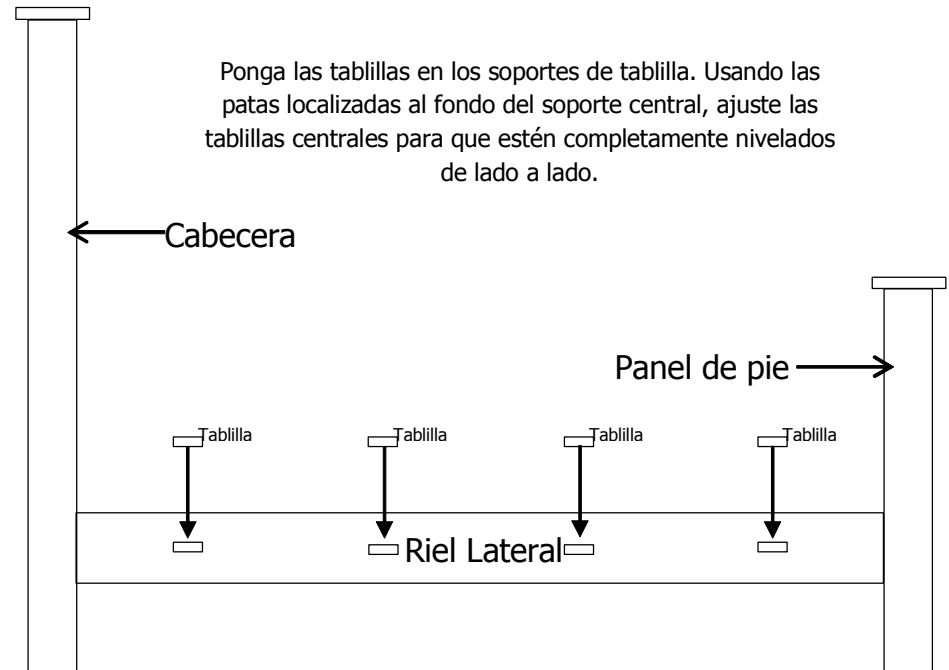




Bed Assembly Instructions

Frame Bed w/rails & slats


Step-1

Simply slip the wide side rails onto the lag bolts on the footboard and then do the same on the headboard. Using a 1/2" box end wrench or socket and ratchet (not included), tighten the lag bolts until the head/footboard feels sturdy. Take care not to over tighten bolts to prevent stripping.

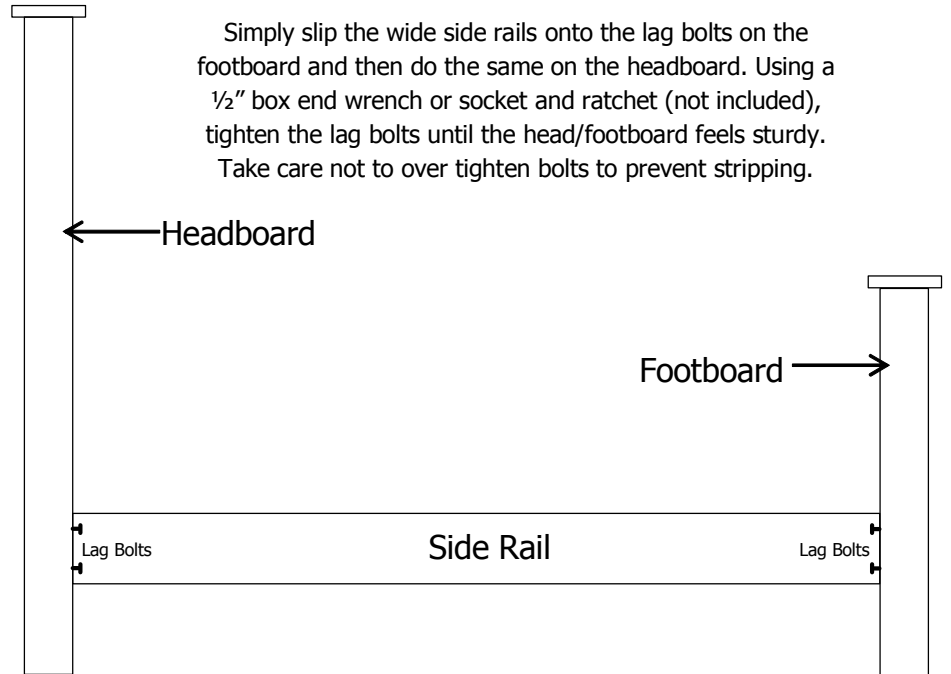

Step-2

Please screw center supports (Queen, King C-King only) into each slat

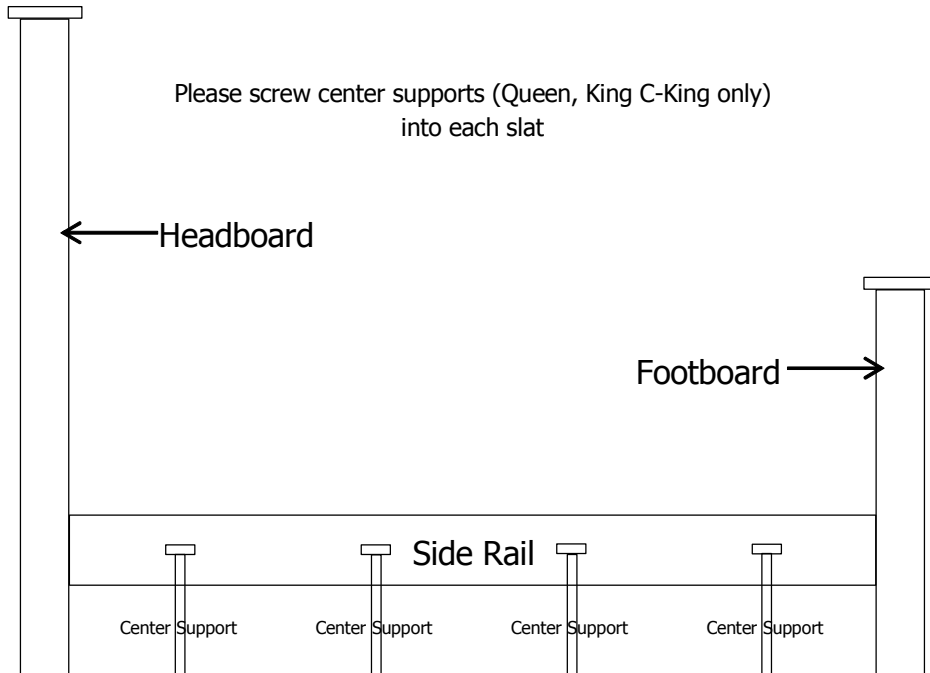

Step-3

Lay the slats into the slat brackets. Using the feet on the bottom of the center support legs, adjust the center slats so that they are completely level from side to side.

