




Bed Assembly Instructions

Frame Bed w/rails & slats


Step-1

Simply slip the wide side rails onto the lag bolts on the footboard and then do the same on the headboard. Using a 1/2" box end wrench or socket and ratchet (not included), tighten the lag bolts until the head/footboard feels sturdy. Take care not to over tighten bolts to prevent stripping.

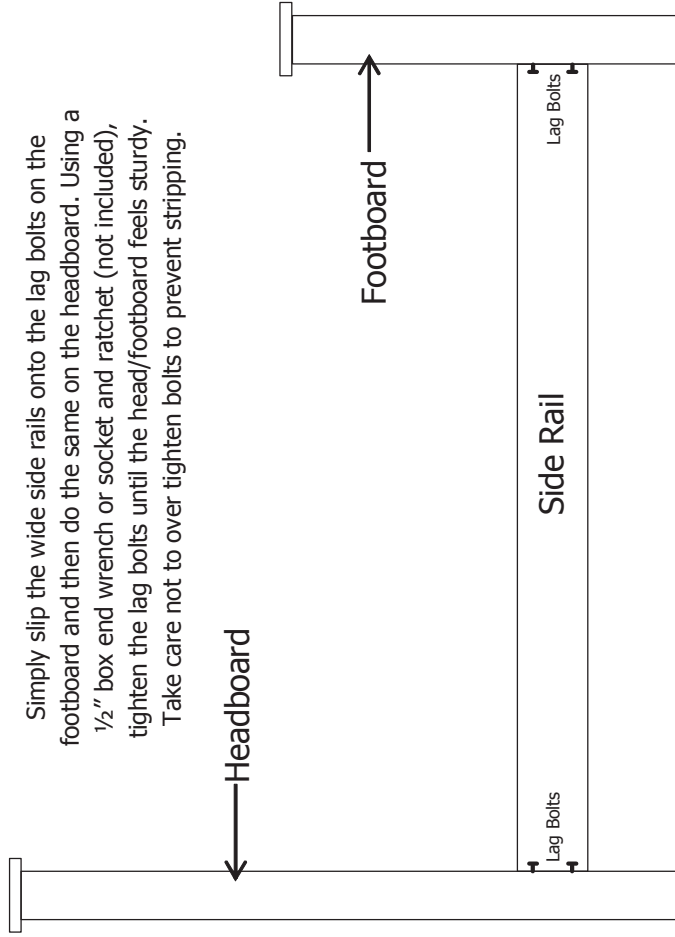

Step-2

Please screw center supports (Queen, King C-King only) into each slat

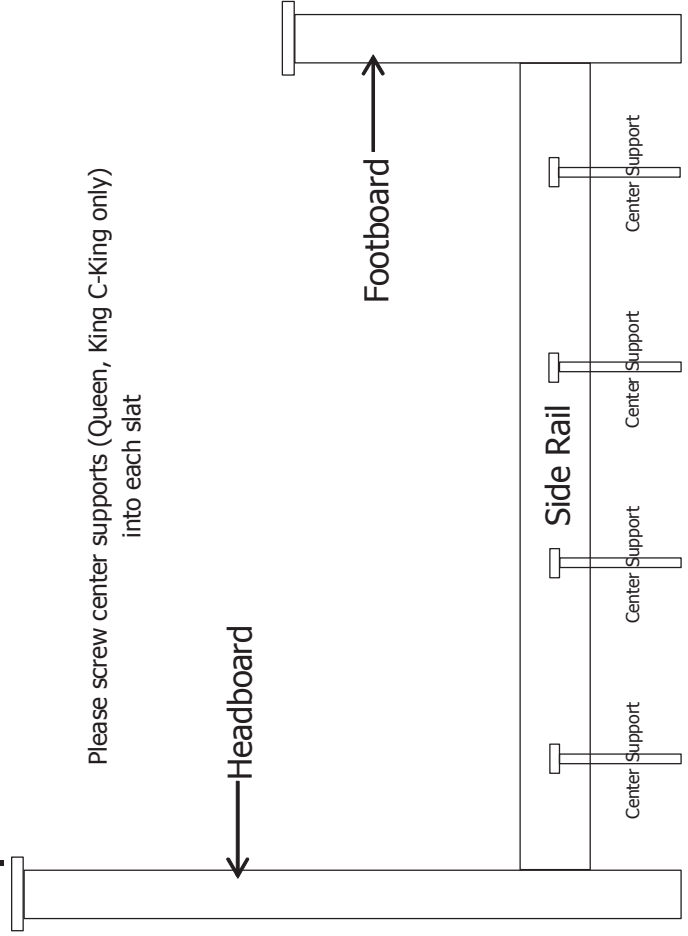

Step-3

Lay the slats into the slat brackets. Using the feet on the bottom of the center support legs, adjust the center slats so that they are completely level from side to side.

