


IMPORTANT: Anti-Tip Over Kit Please Open

BE SAFE!

- Place heaviest items in the lowest drawers.
- DO NOT set heavy objects on top of this product.
- Never allow children to climb or hang on drawers, door, or shelves.
- Never open more than one drawer at a time.



"For the most up to date information, and to view Instructional Videos, please visit www.danielsamish.com"

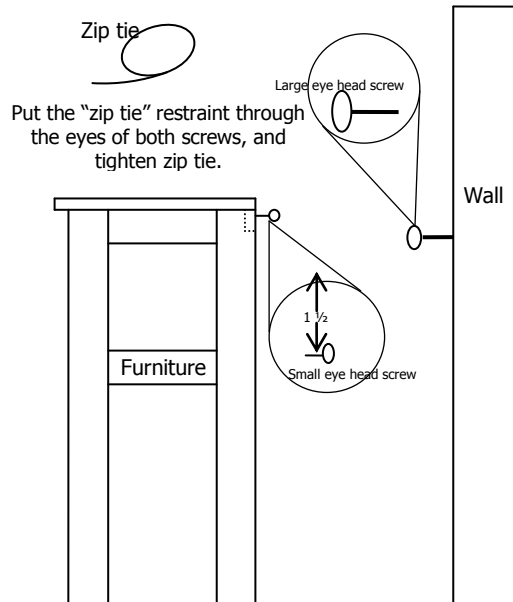

Anti-Tipping Furniture Restraint

- This furniture restraint has been provided in compliance with ASTM F2057-09.
- Use of a tip-over restraint may only reduce, but not eliminate, the risk of tip-over.
- Please follow all directions on the front and back of this paper to ensure proper use of this tip-over restraint.

Directions for Use and Installation of Anti-tipping Furniture Restraint

1. Attach the shorter screw to the back of the furniture by screwing it securely into the solid furniture back, 1 1/2" down from **top of cabinet**. **IMPORTANT:** This measurement is very important to ensure that the screw will fasten into a solid piece of wood behind the plywood back.
2. Attach the longer screw to the wall by screwing it securely into a wall stud at approximately the same height as the shorter screw in the furniture. **IMPORTANT:** Failure to fasten screw to wall stud will cause Anti-tip restraint to not work properly.
3. Put the "zip tie" restraint strap through the eyes of both screws, and tighten zip tie.
4. Confirm that the screws and zip tie are attached securely.
5. If needed, additional tip-over restraints can be obtained through your local furniture store.

Retención para Anti-vuelco de Muebles

- Este sistema de retención de muebles se ha proporcionado en cumplimiento con las normas de ASTM F2057-09.
- El uso de un sistema de retención solo puede reducir, pero no eliminar, el riesgo de vuelco.
- Por favor, siga todas las instrucciones que aparecen en el anverso y reverso de este documento para garantizar el uso adecuado de este sistema de retención para anti-vuelco.

Instrucciones de Uso e Instalación de Sistema para Anti-vuelco de Muebles

1. Coloque el tornillo más corto a la parte posterior del mueble atornillándolo firmemente en la parte solida superior o en el marco del mueble.
2. Coloque el tornillo más largo a la pared atornillándolo firmemente en una viga de la pared que este localizada aproximadamente a la misma altura que el tornillo más corto que fue atornillado en el mueble.
3. Coloque el cinturón de atadura, "zip tie," por dentro de los ojos de los dos tornillos y apriete el cinturón de atadura "zip tie."
4. Compruebe que los tornillos y el cinturón de atadura, "zip tie," estén bien sujetos.
5. Para obtener informacion mas actualizada y ver Videos Instructivos, por favor visite: www.danielsamish.com