




Instrucciones de ensamblaje la cama Capitan

Paso-1


Permita espacio para la cabecera (si está incluida). Posicione los dos grupos de cajones espalda a espalda donde la cama estará localizada. Use los paneles de plataforma incluidos para determinar el espacio correcto. Coloque los paneles en su lugar e instale los 16 tornillos provistos a los huecos pre-taladrados.
NOTA: La plataforma de cama gemela será una sola pieza.

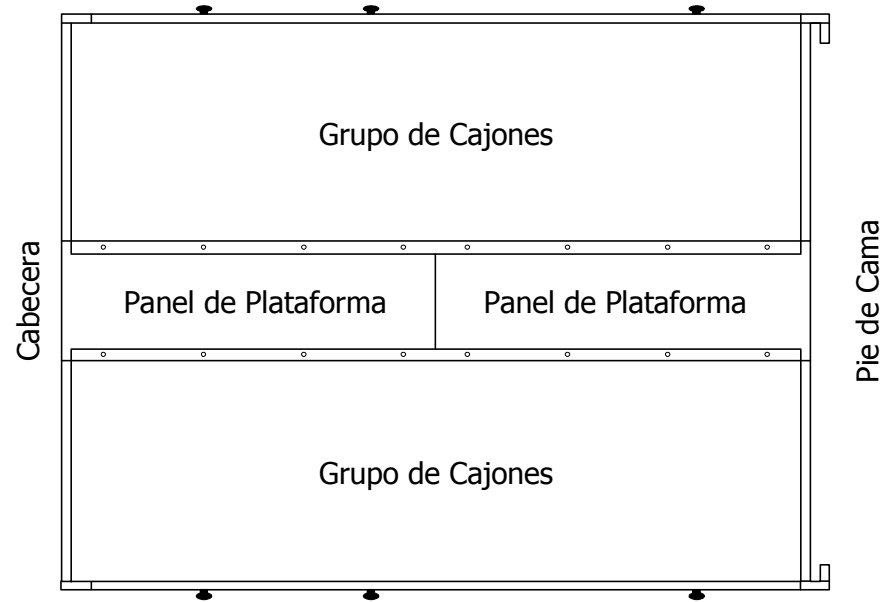

Paso-2

Panel de pie de cama

Deslice el panel de pie de cama adentro de las ranuras en los extremos de los grupos de cajones.

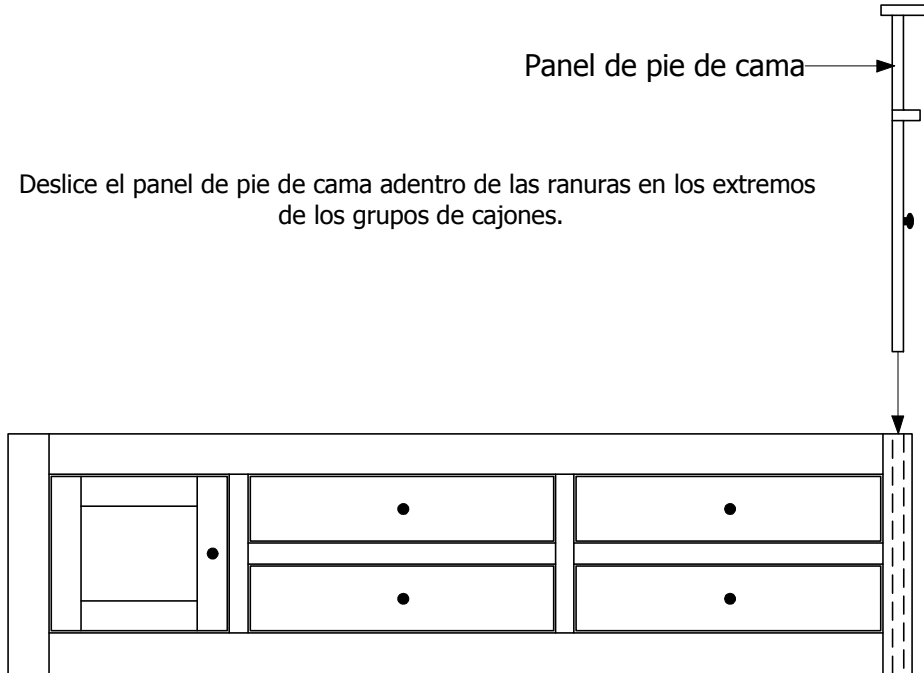


Paso-3

Posicione la cabecera o cabecera de estantería contra los grupos de cajones ensamblados y confirme es espacio de cada lado para asegurar que está centrado. Mantenga la cabecera firmemente contra cada grupo de cajones, y atornille tres tornillos largos provistos a través de los huecos pre-taladrados en la plataforma, y dentro del poste de la cabecera de cada lado, como indica el gráfico. Note que la posición A del tornillo en el gráfico está justo por debajo del borde en la parte superior de la plataforma. Los otros dos tornillos en las posiciones B y C se accesan por la puera pequeña.

NOTA: los postes de la cabecera y cabecera de estantería no están pre-taladrados.

Cabecera o Cabecera de estantería

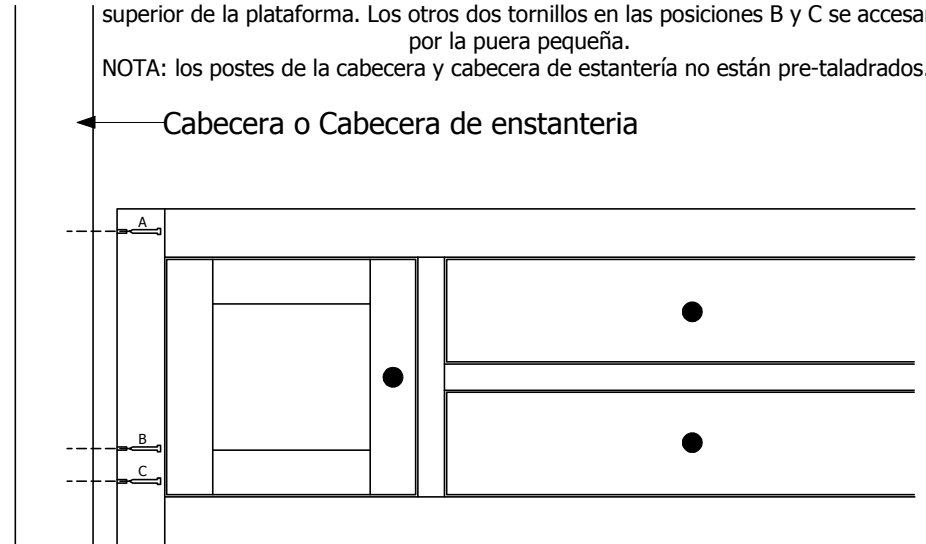




Bed Assembly Instructions

Captains Bed

Step-1


Allowing room for the headboard (if included), position the 2 drawer banks back-to-back where the bed will be located. Use the included platform to determine the spacing. Set the panels in place and install the 16 provided short screws into pre-drilled holes.
 NOTE: Twin size bed platform will be 1 piece.

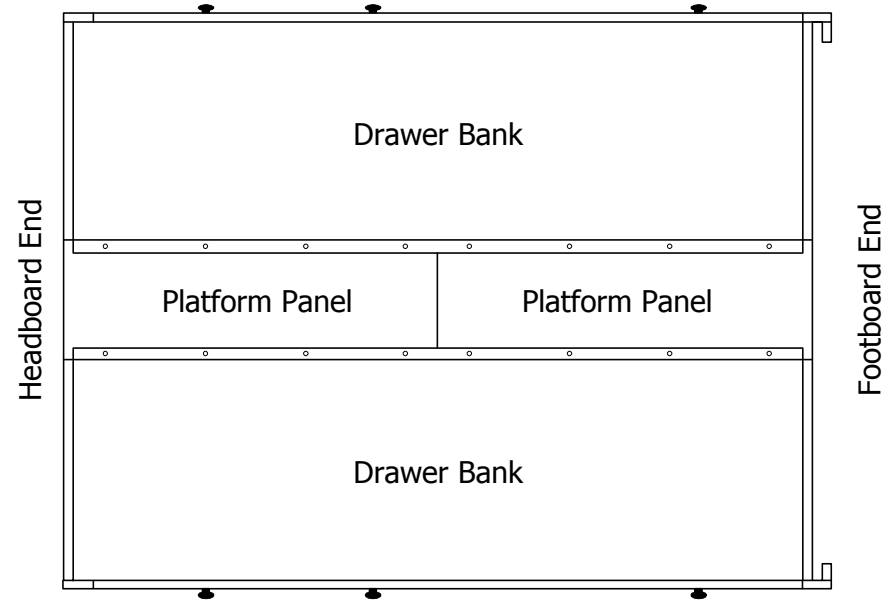

Step-2

Slide the footboard panel into the slots on the ends of the drawer banks.

Footboard Panel

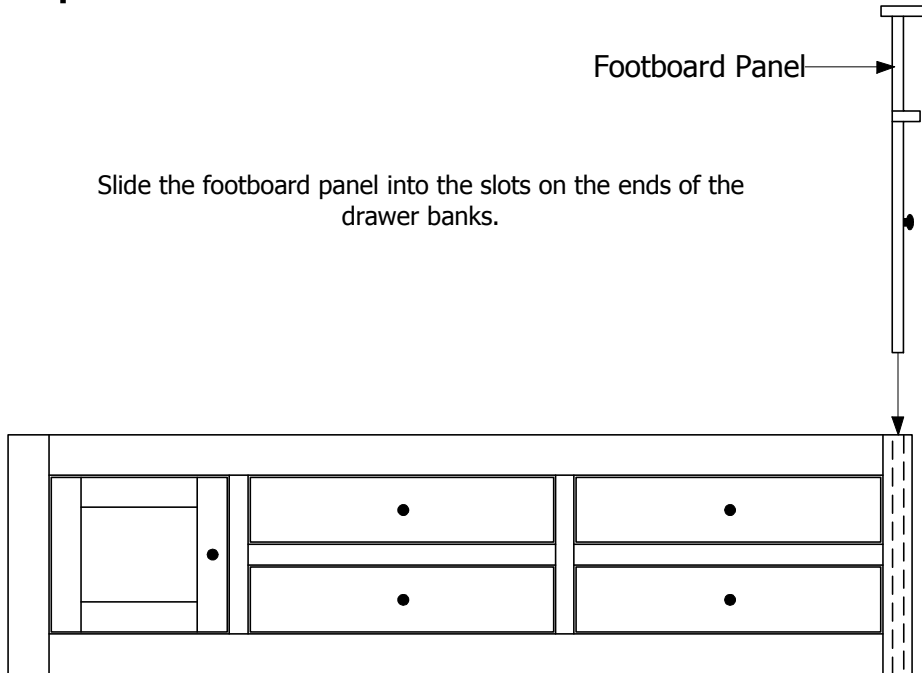

Step-3

Position headboard or bookcase headboard against assembled drawer banks and check spacing on both sides to ensure it is properly centered. Holding headboard firmly against each drawer bank, drive 3 provided long screws through the pre-drilled holes in the platform and into headboard post on both sides as shown. Note that the top screw location, position A on the drawing, is located just below the rim at the top of the platform. The other two screws, in positions B and C, are accessed through the small door.
 NOTE: Headboard posts and bookcase headboards are not pre-drilled.

Headboard or Bookcase Headboard

